


**YAMAHA G22 Brush Guard
Installation Instructions
Black- Part# 29078
Gunmetal- Part# 7072
Stainless- Part# 29074**




Parts List

- Brush Guard-1
- 3/8 x 3 Bolts-2
- 3/8 x 1 Bolts-2
- 3/8 Flatwashers-4
- 3/8 Locknuts-4
- 2" Spacers-2



 *Always wear appropriate eye protection!*

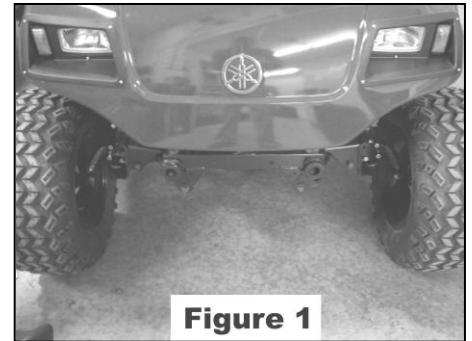

Installation Instructions:

1. Remove the front bumper from the carts as shown in Figure 1.
2. Using the supplied hardware, bolt the new Jake's front bumper to the cart as shown in Figures 2 & 3. The spacers go behind the front mounting plate as shown if Figure 3.
3. Securely tighten all bolts.

