


**E-Z-GO Med./TXT Brush Guard
Installation Instructions
Black- Part# 30844
Gunmetal- Part# 28373
Stainless- Part# 29101**

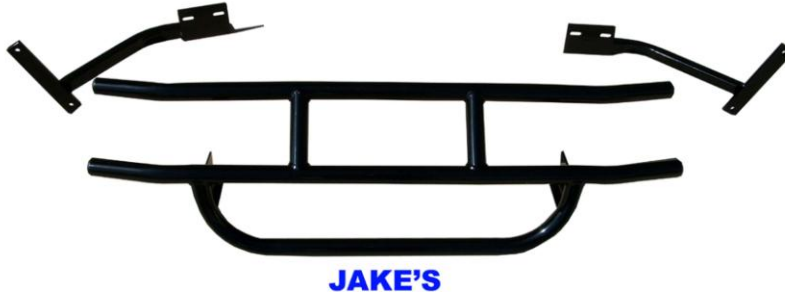

Parts List

- Brush Guard-1*
- 5/16 x 3 Bolts-4*
- 5/16 x 1 Bolts-4*
- 3/8 Locknuts-8*
- Flatwashers-8*
- Passenger Side Mount-1*
- Driver Side Mount-1*



 *Always wear appropriate eye protection!*

1. For easy installation we recommend you have 2 people to hold the roof in place while installing brush guard.
2. Remove the stock bolts, washers, & spacers from the cart and have a partner hold the roof in place. If you don't have help available prop the roof up with a broom handle.
3. Use an 11/32 drill bit to enlarge the stock roof holes on both sides of the cart as shown in Figure 1.
4. Using the supplied 5/16 x 3 bolts, locknuts, washers, stock spacers, and stock washers loosely install the driver side & passenger side mounting brackets. These parts are not universal. The brackets bolt inside the channel of the frame as shown in Figure 2.
5. Using the supplied 5/16 x 1 bolts, washers, & locknuts install the brush guard to both mounting brackets.
6. Securely tighten all bolts.



Figure 1



Figure 2



866-405-2537

www.jakesliftkits.com