


**E-Z-GO Upper Brush Guard
Installation Instructions
Part# 6290**

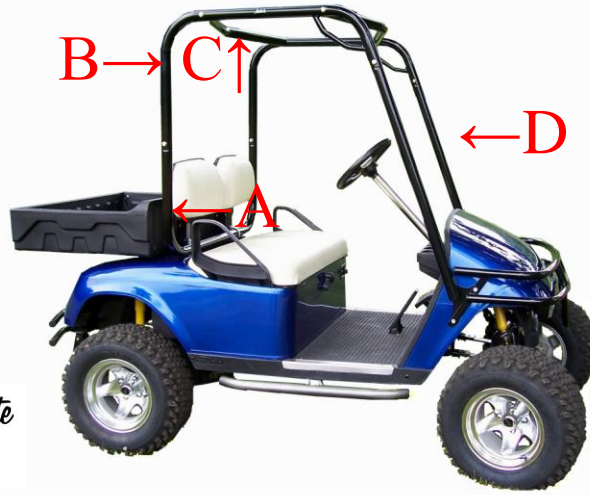

*Always wear appropriate
eye protection!*

1. On a box kit as pictured E-Z-GO Part# 6303 bolt Item A (U-shaped) to the cart with the supplied U-bolts. If your cart has stock seat mounts, lift Item A approximately 1" off rear body section drill holes, and mount the U-bolts to the stock seat mounts.
2. Mount Item B(2) to both sides of the of Item A using the supplied nuts and bolts.
3. Mount Item D (2) to both sides of the front cowl and Item B using the supplied nuts and bolts.
4. Mount Item C (2) to both the front and rear of the upper brush guard as shown.
5. Securely tighten all nuts and bolts.

**WARNING: This device does not provide
roll-over protection.**

NON-R.O.P.S. RATED



866-405-2537

www.jakesliftkits.com