

**YAMAHA G14-G21 Brush Guard
Installation Instructions**
Black- Part# 29077
Gunmetal- Part# 7070
Stainless- Part# 29102




Parts List

- Brush Guard-1*
- 3/8 x 4 3/4" Bolts-2*
- 3/8" Washers-2*
- 3/8" Locknuts-2*
- 1" Spacers-2*



 **Always remember to wear appropriate eye protection!**

1. Remove the front bumper from the cart, save the two bolts for future installing the brush guard.
2. Support the A-Arm with a jack. Remove the existing cotter pins and A-Arm mounting bolts shown in Figure 1.
3. Place the 3/8" x 4 3/4" bolts through the two holes in the front of the brush guard. Add the spacers to the bolts on the back side of the brush guard as shown in Figure 2.
4. Loosely install the brush guard to the stock A-Arm bolt location using the supplied bolts, spacers, washers, & locknuts.
5. Using the stock bumper bolts, bolt the brush guard to the stock frame as shown in Figure 3.
6. Securely tighten all bolts.

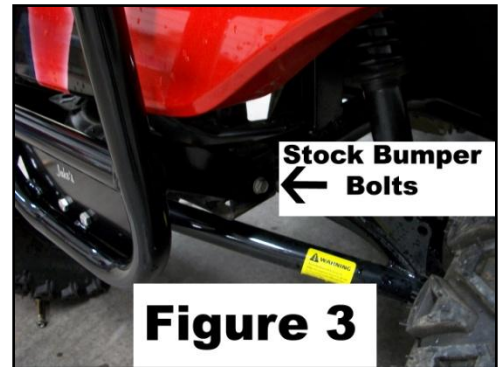

866-405-2537

www.jakesliftkits.com