

**YAMAHA G14-G21 Safari Bar
Installation Instructions**
Black- Part# 6277
Gunmetal- Part# 7078
Stainless- Part# 6277-S



Parts List

Safari Bar-1



*Always wear appropriate
eye protection!*




1. Remove the front bumper from the cart, save the two bolts for future installing the brush guard.
2. Support the A-Arm with a jack. Remove the existing cotter pins and A-Arm mounting bolts shown in Figure 1 and save for installation of brush guard.
3. Loosely install the safari bar to the stock A-Arm bolt location using the stock A-Arm bolts.
4. Using the stock bumper bolts, bolt the safari bar to the stock frame as shown in Figure 2.
5. Securely tighten all bolts.



Figure 1



Figure 2

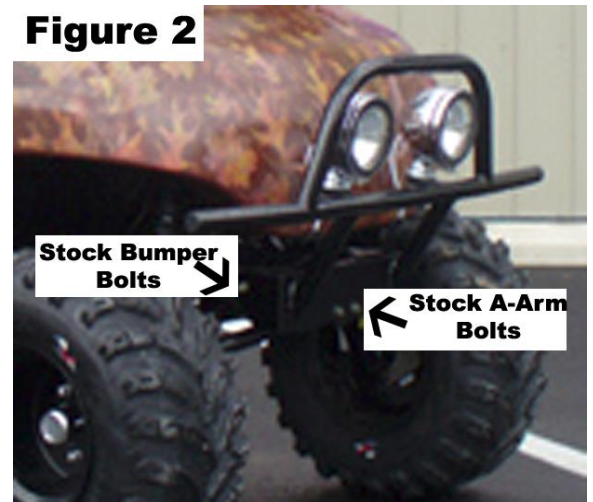

866-405-2537

www.jakesliftkits.com