

**Zone/Star Rear Receiver
Installation Instructions
Part# 7064**



JAKE'S





*Always wear appropriate
eye protection!*

Hardware:

5/16 x 1 Bolts w/ Locknuts-2 ea.

**INSTALLATION
INSTRUCTIONS:**

1. Remove the rear bolts from the rear safety bar. Using the stock bolts mount the receiver to the rear step as shown in Figure 1.
2. Push the rear of the receiver up to the frame and clamp the rear of the receiver to the frame. Using a 5/16" drill bit, drill through the frame using the holes in the receiver as a guide.
3. Using the supplied 5/16x1 bolts & lock nuts mount the rear of the receiver to the frame.
4. Securely tighten all bolts.

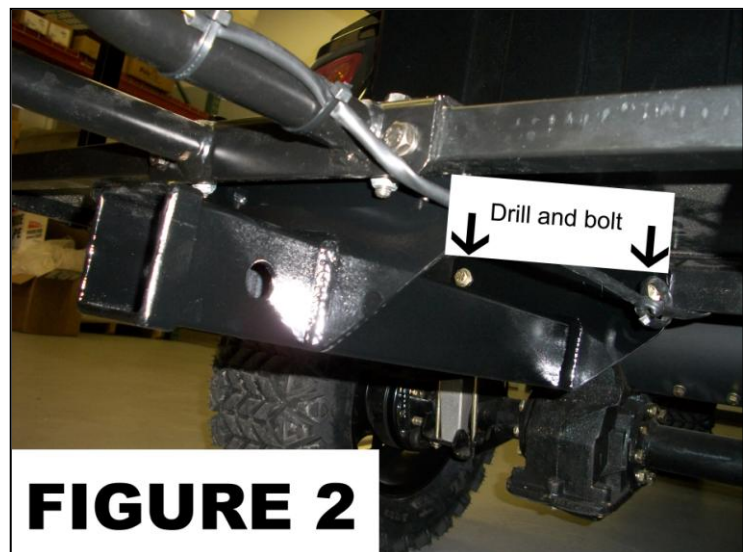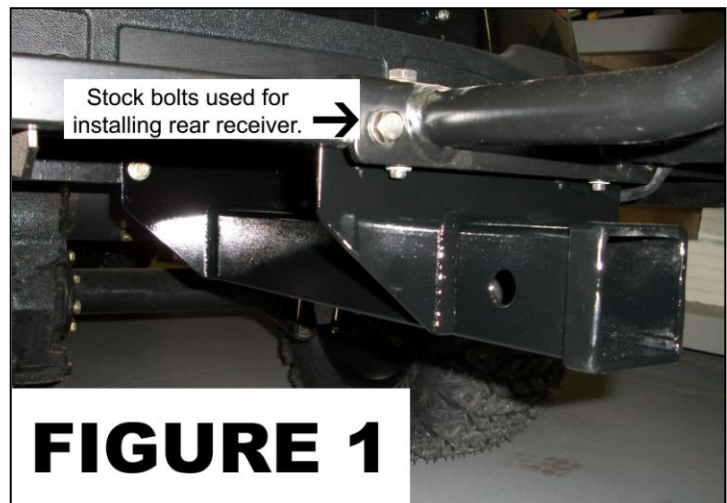

866-405-2537

www.jakesliftkits.com