

Yamaha G29 Nerf Bars w/ Diamond Plate Step Installation Instructions

Part# 7456



Hardware Kit


- 4- 5/16x1 bolts
- 4- 5/16 washers
- 4- 5/16 locknuts
- 2- U-bolts
- 4- 3/8 locknuts
- 4- 3/8 washers
- 6- 3/16 Rivets



2007-2010 Rear Mounts 45° Bend



2011 & Up Rear Mounts 90° Bend

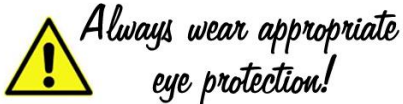

Installation Instructions:

1. Jack up the car and place it on jack stands.
2. Remove the driver side front and rear wheels/tires.
3. Mount the rear brackets to the nerf bar as shown in FIGURE 2. **NOTE: The rear frame of the car was changed in 2011. Make sure you mount the appropriate mount to the rear of the nerf bar as shown in FIGURE 2. 2007-10 models use the mount that is bent 45°. 2011 & Up models use the mount that is bent 90°(flat) as shown in FIGURE 2.**
4. Take the driver side nerf bar (top bar pictured above) and hold the front mounting plate into the channel as shown in FIGURE 1.
5. Using the top two holes as a guide mark the car and drill two 5/16" holes and loosely mount the nerf bar in place as shown in FIGURE 1 using the supplied 5/16 x 1 bolts, washers & locknuts.
6. Place the rear portion of the nerf bar against the frame and bolt to the frame using the supplied u-bolts, 3/8 washers & locknuts as shown in FIGURES 3.
7. Securely tighten all bolts.
8. Repeat steps 2-6 for the passenger side of the car.
9. This nerf bar kit comes with an optional diamond plate step. If you want to install the diamond plate step place it on top of the nerf bar in the desired location. Using a marker or punch mark the three holes on the nerf bar. Using a 3/16 drill bit drill through the three marked holes in the nerf bar. **NOTE: Make sure you only drill through the top section of the nerf bar. You do not drill through the entire nerf bar.**
10. Using the supplied rivets mount the diamond plate step to the nerf bar using the 3 holes you just drilled.

