

Club Car Precedent Shooting Basket Installation Instructions Black- Part# 30718



Hardware Kit



- 2-Mounting Brackets
- 4-5/16x1 Bolts
- 8-5/16 Flat Washers
- 4-5/16 Locknuts



 *Always wear appropriate eye protection!*

Installation Instructions:

1. Remove the front bottom stock roof strut covers.
2. Unbolt the roof from the cart on the driver side.
3. Using the stock bolts mount the driver side mounting bracket to the cart as shown in Figure 1. **Note the bend goes towards the outside of the cart.**
4. Unbolt the roof from the cart on the passenger side.
5. Using the stock bolts mount the passenger side mounting bracket to the cart as shown in Figure 2. **Note the bend goes towards the outside of the cart.**
6. Using the supplied bolts, washers & locknuts bolt Jake's basket to the mounting brackets.
7. Securely tighten all bolts.

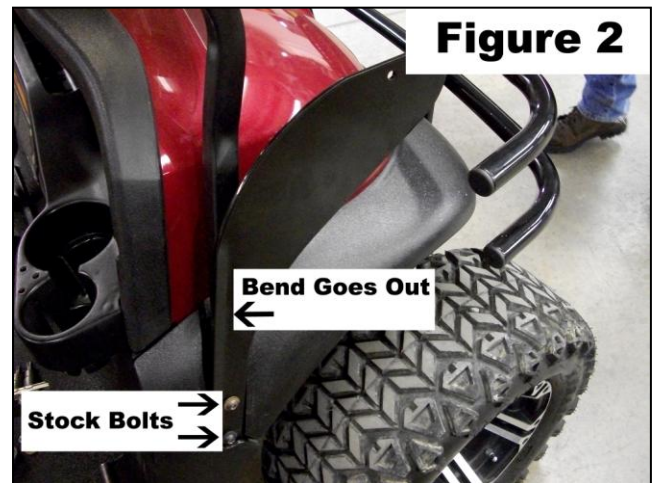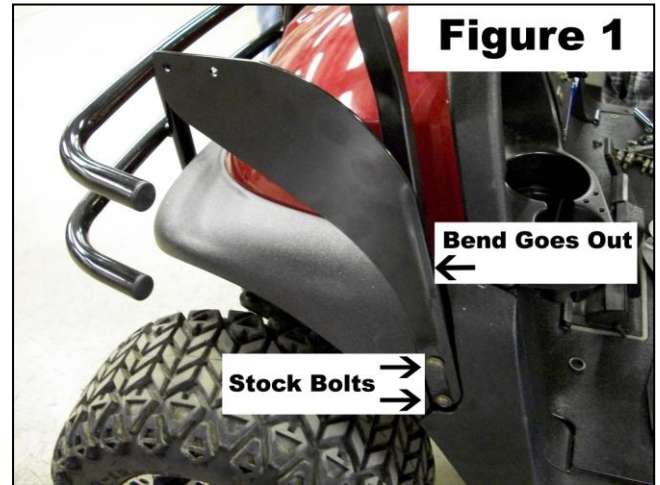

866-405-2537

www.jakesliftkits.com