

Yamaha Drive/Adv Shooting Basket Installation Instructions Part# 7502



Components

- 1-Basket
- 1-Driver side mount
- 1-Pass. side mount
- 1-Hardware Kit





*Always wear appropriate
eye protection!*

NOTE: This kit is designed for cars with factory roofs.

Installation Instructions:

1. Slide the rubber cover up the roof struts to expose the bolts holding the roof struts to the car.
2. Remove the top roof mount bolt and back off the bottom bolt.
3. Slide the basket mounts through the rubber cover. The bottom of the bracket is slotted; slide the bracket behind the stock bottom bolt. Loosely install the top stock roof mount bolt. Do not tighten at this time. **NOTE: The mounting brackets are side specific. When installed correctly the bend in the bracket will go to the outside of the car as shown. The brackets get installed to the outside of the stock roof struts. FIGURE 1 shows the driver side of the car.**
4. There is a hole in the middle of the mounting brackets. Hold the bracket so the hole is in the center of the roof struts. Using a 5/16 drill bit, drill through hole and through the roof struts as shown in FIGURE 2.
5. Using the supplied 5/16 x 1 3/4 bolt, washers and locknuts securely bolt the mounts to the roof struts as shown in FIGURE 3.
6. Tighten the stock bottom roof mount bolts.
7. Using the supplied basket, 5/16 x 1 bolts, washers and locknuts loosely bolt the basket to the mounts. **NOTE: The mounts welded to the basket go to the inside of the mounts you bolted to the car.**
8. Once all four bolts are started, level the basket and securely tighten.
9. Reinstall rubber cover to the car.

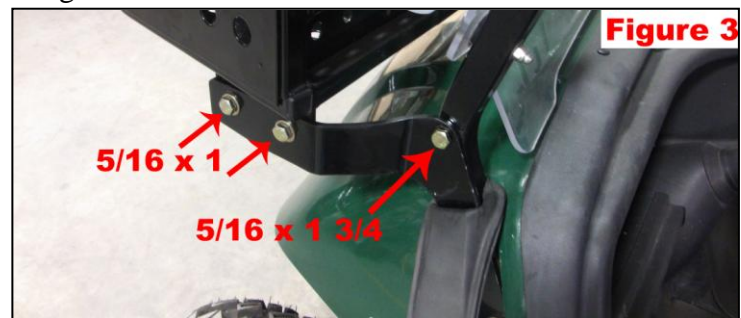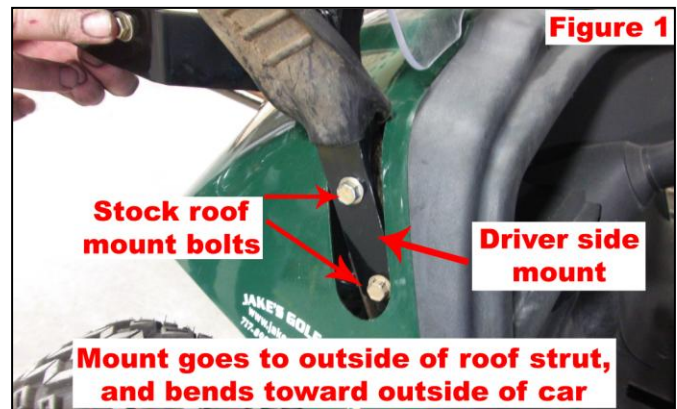

866-405-2537

www.jakesliftkits.com